

RIFCO

EST. 1975

Product Warranty

PLEASE READ THIS BEFORE ATTEMPTING INSTALLATION!

It is the responsibility of the installer to examine and check your Rifco product for both suitability and quality BEFORE installation.

Rifco warrants that in the manufacture of its products, only high quality workmanship and materials have been employed. They guarantee against faulty workmanship for a period of twelve (12) months for all cabinets and mirrors and seven (7) years for vanity units provided that it has been installed according to the installation instructions.

Quality is of the utmost importance and we are committed to maintaining high standards across each and every product. We ensure that all products leave our premises in excellent condition. It is the responsibility of the installer to examine and check the Rifco Vanity for both suitability and quality BEFORE installation.

Should you find any fault with either materials or workmanship within twelve months, Rifco, will at its own cost repair or, at its option, supply a replacement for the faulty product or component

It should be noted that all Rifco products are manufactured from water resistant materials but are not waterproof. Care must be taken to immediately dry any spillage or leakage of water that may gain access to the vanity's cabinet as water damage is not a justifiable claim. Installation, cleaning and maintenance instructions need to be followed to ensure validity of warranty.

The liability of the warranty and guarantee is limited to a replacement vanity, or part thereof, of similar value and does not include any service costs or related damage. This guarantee does not cover damage by improper installation, accident, misuse, abuse, neglect, negligence, excessive wear and tear, improper care and maintenance, water and natural causes such as sunlight, humidity and other environmental conditions. Any damage caused to the Rifco product as a result of installing other components (i.e. tapware) will remain the responsibility of the purchaser.

The purchaser must produce proof of the date purchased when making a claim. The Installation and Care details on the reverse side of this sheet must be adhered to. To validate the guarantee please ensure the following details are completed and proof of purchase is attached. Please retain this information for your records.

Proof of purchase must be provided when making a claim. Please retain this information when making a claim:

Customer Name:	Date of purchase:
Name of Retailer:	Retail Invoice No:
Name of Installer:	Installer Licence No:

Installation of this product constitutes acceptance of its colour, design, size, and style.

No claims for damaged or incorrect goods can be recognised once the product has been installed. This includes partially installed goods.

It is the purchaser's responsibility to confirm the cabinet/mirror is in good order and condition before installation.

IF FOR SOME REASON THE PRODUCT IS NOT IN GOOD ORDER AND CONDITION, DO NOT INSTALL, DO NOT REMOVE ANY PACKAGING FROM THE VANITY/CABINET/MIRROR, I.E. TAPE OR CORNER PROTECTORS AND CONTACT YOUR RETAILER.



Shave Cabinet Installation Instructions

Step 1. Ensure that you have read the product warranty on the cabinet you have purchased. Then carefully read the Installation Instructions before attempting any installation.

Step 2. Lay cabinet on its back on a soft surface (eg a bed, or carpeted floor) so that the mirrors are facing the ceiling.

Step 3. Carefully remove doors by unclipping them from the cabinet as per diagram on the right. (No screwdriver is required here!)

Ensure that they will be safe and secure during the next steps of installation.




Step 4. Secure the cabinet to the wall by using the appropriate screws through the fixing rail. (Some smaller cabinets are not supplied with fixing rails as they do not need it.) You will need to consider what you are screwing to: (For gyprock wall – fix cabinet to studs- if possible. If not possible to locate studs, use wall anchor plugs; for masonry walls – appropriate plugs will need to be used. Use a spirit level to not only ensure that the cabinet is straight, but that your bathroom wall is level – otherwise your cabinet need to be ‘packed-out’ with an appropriate material.


Step 5. Carefully attach the doors back onto the cabinet. Remove the protective packaging and re-adjust the cabinet doors (if required) with a screwdriver (see diagram below). Finally, ensure that all screws are tight and not loose.

Hinge adjustment


To adjust doors left and right

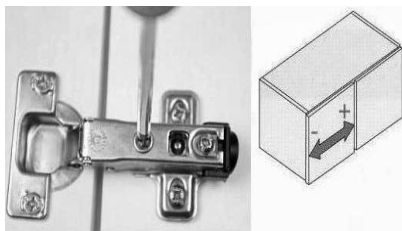

To adjust up and down
Loosen both screws to move base plate up and down, then tighten.

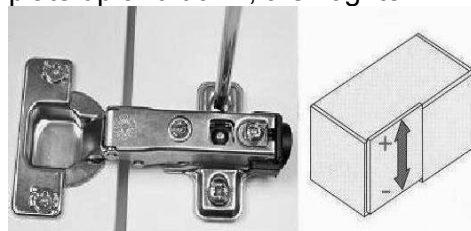

To adjust in and out

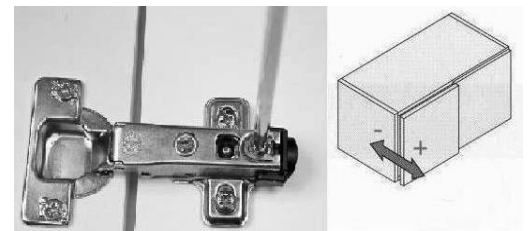

How to care for your Rifco Bathroom Cabinet/Mirror

Ensure that your bathroom is well ventilated. Avoid excessive cleaning.

Do not use any ammonia based cleaning products on this cabinet. Use of such products will cause edge creep on your mirror. Remove immediately any chemicals or products (eg toothpaste, or shaving cream, etc.) that comes into contact with your Rifco mirror.

For cleaning of mirror, use either an approved mirror cleaner or a solution of warm water and methylated spirits. Apply the cleaning solution to a clean soft cloth and wipe the mirror, ensuring all joints and edges are thoroughly dry.



Vanity Installation Instructions

A licensed tradesperson must install your Rifco Vanity.

It is the responsibility of the purchaser to examine and check the Rifco Vanity for both suitability and quality **BEFORE** installation.

If the unit is not in good order and condition do not install. Please contact the retailer where the Vanity was purchased for further instructions. Rifco accepts no responsibility once partially or fully installed

❖ Remove drawers from vanity.

Locate tab under each side of drawer, located on the underside of the drawer at the front.

Pull them simultaneously towards you.

Whilst still pulling the tabs, pull the drawer straight back towards you.

The drawer is now free from the locking tabs, pull it out the rest of the way.


It is recommended that the drawer runners are covered to prevent particles/dust blocking the runners.

❖ Remove top from vanity.

❖ Having established the position where the vanity, mark and drill the holes for your plumbing fixtures, i.e. waste outlet, hot and cold water inlets. Move vanity into position and ensure it is level and square. This may require packing behind and/or below the vanity.

❖ Once it is level and square, fix the vanity to the wall using the correct fitting depending on your wall (not supplied). If using standard screws and star plugs, be sure to use the washers in order to spread the load.

❖ Position fixings as shown below:

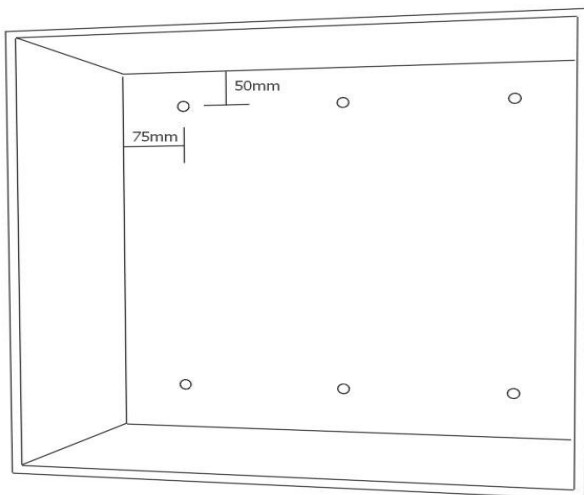

The number of fittings used to fix cabinet will depend on the size of unit, your installer will know the suitable amount depending on the size of your cabinet.

Rifco recommends the following minimum;

Up to 900 width of vanity – 3 per row

900 to 1200 width of vanity – 4 per row

For wall hung vanities, it is essential the unit is fixed securely. The use of dynabolts is recommended for masonry wall, and fixing to studs in cavity walls. Rifco does not recommend installing wall hung vanities with toggle type fixing systems.

❖ Connect the water supply lines and waste outlet

❖ Replace drawers or doors back onto the vanity unit and make any necessary adjustments.

❖ Fix the top to the vanity unit using quality bathroom use silicone. The gap between the wall and top will need to be filled with silicone. The vanity unit must then be sealed to the wall on all edges with silicone.